

## Redialing a Recent Number

The last three external telephone numbers that you dialed are stored by the system. You may retrieve one to call.

When using a **programmed key**,

- Press the “**Redial**” key. The most recent number will be displayed
- Press the “**Redial**” key again to see the second number and again to see the third.
- When the desired number is visible, wait and within two seconds the number will be dialed.

