

Using Loudspeaker

You may use the speaker on your phone, instead of the handset, to conduct a call

When using a **programmed key**,

- Without picking up the handset press the “Speaker” key
- Dial the desired party
- Once the party answers, you may pick up the handset or continue the call in speaker mode
- To deactivate the speaker, pick up the handset

Please note – economy handsets do not support two way loudspeaker conversations – you must pick up the handset